

## Trafowechsel PIN / PIN d



Diese Modelle sind mit einem LED-Betriebsgerät ausgestattet .  
Falls dieses Gerät ausgewechselt werden soll gehen Sie bitte vor wie folgt:

1. Entfernen Sie die Fußplatte durch Abschrauben



2. mittels zugesandtem Steckschlüssel  
die beiden Muttern im Schaftende lösen




3. Entfernen der unteren Kappe



4. Kabel-Zugentlastung lösen



5. obere Verstellechraube lösen

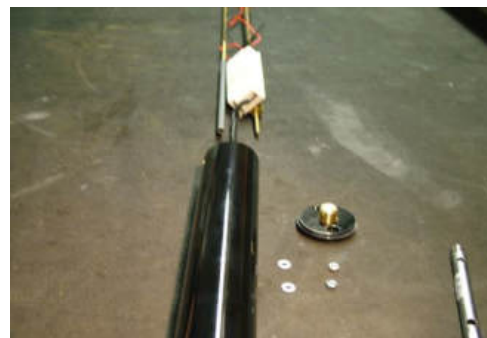

6. Schaftrohr abziehen

7. Betriebsgerät  
kann jetzt gewechselt werden

8. Wiedezusammenbau in umgekehrter Reihenfolge. Achtung: Zugentlastung wieder anziehen!  
**Diese Arbeiten erfordern eine elektrotechnisch geschulte Fachkraft.**

## Exchange of transformer PIN / PIN d



**Attention: Repair requires a trained electrician!**

1. Remove the base plate with a pipe wrench.



2. Use the socket spanner to loosen the nuts.



3. Remove the cap.



4. Loosen the strain relief device.



5. Loosen the screw at the top end of the shaft.



6. Hold the arm and remove the shaft.



7. The transformer can now be exchanged.

8. Reassemble in reverse order.

**Attention: Remember to tighten the strain relief device.**